

# Technical Data Sheet


## Repetitive Syringe Dispenser

Catalog #72480

### Features

- Quick-change syringes
- Varying syringe sizes allow for dispensing 27 different volumes of liquid
- Ergonomically designed for handling comfort with less fatigue
- Excellent accuracy and reproducibility
- Autoclavable syringe (except for the 60.0 ml and 3.0 ml syringes, which are not autoclavable)

### Description & Replacement Information

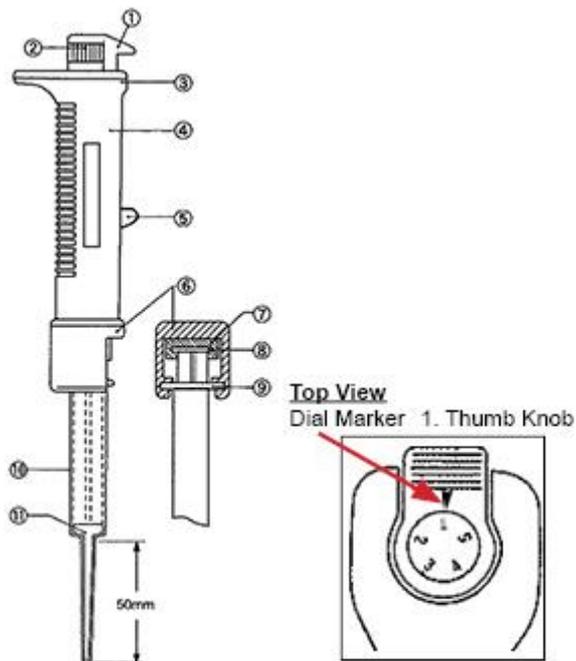

### Part and Its Composition

1. Thumb knob - *Nylon*
2. Volume Adjustment Dial - *Nylon*
3. Handle Cap - *ABS*
4. Handle - *ABS*
5. Piston Lever - *Aluminum*
6. Syringe Holder - *Polypropylene*
7. Piston Holder - *Polypropylene*
8. Piston Flange - *Polypropylene*
9. Syringe Flange - *Polypropylene*
10. Syringe - *Polypropylene*
11. Piston - *Polypropylene & Rubber*

### Operation and Specifications

1. Push piston lever to its lowest position.
2. Select the desired syringe. To achieve smooth operation in the dispenser, test syringe by moving syringe piston up and down several times.
3. Push syringe flange and piston flange firmly into the syringe holder and the piston holder, respectively. (Fig.A)

4. Select the volume to be dispensed by turning volume adjustment dial to the appropriate number.  
(Fig.B)
5. Place the nozzle of syringe into the liquid to be dispensed.
6. Pull piston lever up so that syringe is filled with liquid. **Note:** minimal air volume in the syringe can allow for better accuracy and reproducibility. (Fig.A)
7. Wipe the nozzle of syringe or tip with a tissue.
8. If syringe has been fully filled, the thumb knob should be depressed once, and the liquid expelled before using the dispenser. The dispenser will then deliver the number of dispenses in accordance with the table attached to the side of the handle.
9. If the syringe is only partially filled, the dispenser can be used by pressing the thumb knob until it reaches the black line at the end of the syringe. **Note:** To maintain its accuracy, do not dispense liquid after the piston has passed the black line.
10. Place nozzle or tip of syringe so it is touching the inside wall of the receptacle. Depress the thumb knob as far as it will go. The desired volume of liquid will then be delivered into the receptacle.
11. After dispensing, the liquid remaining in the syringe can be ejected by pushing the piston lever downwards.